


Because reliability matters most

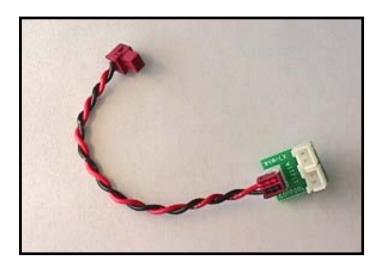

CRA-LX (DUAL RELAY CONTROL ADAPTER)

APPLICATION:

Used where it is necessary to control two 20 amp relays (Model RLY-LX) from the same circuit.

LOCATION:


Plugged into circuit board in low voltage compartment of LX Power Center.

Pentair Pool Products, Inc.

1620 Hawkins Ave., Sanford, NC 27330 • (919) 774-4151 10951 W. Los Angeles Ave., Moorpark, CA 93021 • (805) 523-2400



Because reliability matters most

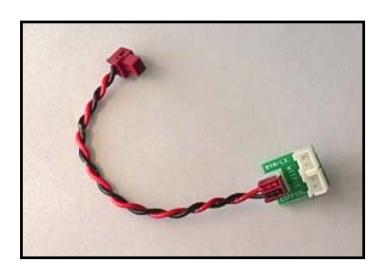

CRA-LX (DUAL RELAY CONTROL ADAPTER)

APPLICATION:

Used where it is necessary to control two 20 amp relays (Model RLY-LX) from the same circuit.

LOCATION:

Plugged into circuit board in low voltage compartment of LX Power Center.

Pentair Pool Products, Inc.

1620 Hawkins Ave., Sanford, NC 27330 • (919) 774-4151 10951 W. Los Angeles Ave., Moorpark, CA 93021 • (805) 523-2400

Rev. B 2-9-04 1 P/N 9421055 Rev. B 2-9-04 1 P/N 9421055

INSTALLATION:

- 1. Disconnect power from system.
- 2. Loosen LOCK SCREW of hinged faceplate in left-side compartment of LX Power Center, and swing open to expose low voltage section.
- 3. Select which circuit needs to drive two power relays, and plug red/black jumper wire of CRA-LXinto circuit board at appropriate relay socket.
- 4. Mount both power relays (model RLY-LX) in the high voltage compartment of Power Center, in accordance with instructions provided.
- 5. Feed 2-pin female connectors of each RLY-LX through holes in compartment divider, and plug into the 2-pin male connectors of CRA-LXcircuit board.

INSTALLATION:

- 1. Disconnect power from system.
- 2. Loosen LOCK SCREW of hinged faceplate in left-side compartment of LX Power Center, and swing open to expose low voltage section.
- 3. Select which circuit needs to drive two power relays, and plug red/black jumper wire of CRA-LXinto circuit board at appropriate relay socket.
- 4. Mount both power relays (model RLY-LX) in the high voltage compartment of Power Center, in accordance with instructions provided.
- 5. Feed 2-pin female connectors of each RLY-LX through holes in compartment divider, and plug into the 2-pin male connectors of CRA-LXcircuit board.

P/N 9421055

2



Rev. B 2-9-04