

# OWNER'S MANUAL

## ONE-PERSON & TWO-PERSON SAUNAS

### WITH CERAMIC OR CARBON HEATERS



SA2400/SA2402/SA2406/SA2409/SA1309

# TABLE OF CONTENTS

|                          |       |
|--------------------------|-------|
| ASSEMBLY TIPS & WARNINGS | 3     |
| PARTS IDENTIFIER         | 4     |
| ASSEMBLY INSTRUCTIONS    | 5-10  |
| OPERATION INSTRUCTIONS   | 11    |
| ENJOYING YOUR SAUNA      | 12    |
| HEALTH & SAFETY WARNINGS | 13    |
| CLEANING & MAINTANENCE   | 14    |
| TROUBLESHOOTING GUIDE    | 14-15 |
| REPLACEMENT PARTS        | 16-25 |
| WARRANTY INFORMATION     | 26    |

*The information contained in this manual is subject to change without notice.*

## ASSEMBLY TIPS & WARNINGS

- Before you begin, read all assembly instructions and safety warnings carefully.
- This sauna requires at least 2 adults to complete assembly.



- Remove all of the contents from boxes and verify that you have all of the parts shown on the Parts Identifier before you begin assembly. *Note: Some parts may be pre-installed or pre-assembled.*
- This manual is used for the assembly of several sauna models; therefore, some figures or drawings may not look exactly like your product.
- Cover the sauna floor during assembly to avoid staining the unfinished wood surface.
- Retain this Owner's Manual for future reference.

### ELECTRICAL REQUIREMENTS

- We recommend consulting a licensed electrician and checking local ordinances before installing ANY sauna.
- This sauna requires a standard 15 amp receptacle.


 


- Refer to the serial plate on the back of the sauna for complete electrical specifications.
- This sauna requires a dedicated circuit - No other appliances should share the same outlet with the sauna.

### CHOOSING A LOCATION

- This sauna should only be placed INDOORS on a dry, level surface.
- There should be a minimum of 5 inches clearance between the sauna and any wall.
- Make sure the main power cord will reach the outlet and remains easy to access.
- The sauna should only be used in a dry location as moisture will damage the wood and electrical components.
- Keep the sauna away from any potential hazards including water sources, flammable objects and combustible materials.

# PARTS IDENTIFIER (NOT TO SCALE)
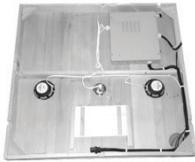
|   |   |   |   |   |
|---|---|---|---|---|
| <br><b>FRONT PANEL WITH GLASS DOOR</b>                                   | <br><b>LEFT PANEL</b>                        | <br><b>RIGHT PANEL</b>                       | <br><b>BACK PANEL</b>                                | <br><b>ROOF</b>  |
| <br><b>ROOF COVER</b>  | <br><b>FLOOR</b>                             | <br><b>FLOOR HEATER<sup>2</sup></b>          | <br><b>BENCH SEAT</b>                                | <br><b>BENCH HEATER PANEL</b>  |
| <br><b>BACK PANEL HEATER COVER<sup>1</sup></b>                          | <br><b>BACKREST</b>                         | <br><b>DOOR HANDLE</b>                      | <br><b>STEREO SHELF</b>                             | <br><b>AM/FM CD PLAYER WITH MP3 INPUT<sup>4</sup></b>   |
| <br><b>CUP HOLDER</b>  | <br><b>MAGAZINE RACK</b>                   | <br><b>DOUBLE TOWEL HOOK<sup>3</sup></b>   | <br><b>COLOR THERAPY CONTROL PANEL<sup>3</sup></b> | <br><b>OXYGEN IONIZER<sup>3</sup></b>  |
| <br><b>2" (50mm) SCREW<sup>5</sup></b>                                 | <br><b>1-1/2" (40mm) SCREW<sup>5</sup></b> | <br><b>1-1/8" (30mm) SCREW<sup>5</sup></b> | <br><b>3/4" (20mm) SCREW<sup>5</sup></b>           | <sup>1</sup> Ceramic Heater Models Only<br><sup>2</sup> Carbon Heater Models Only<br><sup>3</sup> Two-Person Models Only<br><sup>4</sup> Stereo audio cable with 3.5mm (1/8") TRS connector (mini-stereo jack) not included<br><sup>5</sup> Extra hardware is included - It is normal to have extra screws leftover when sauna assembly is complete |
| ADDITIONAL EQUIPMENT REQUIRED:<br><br><b>PHILLIPS HEAD SCREWDRIVER</b> | <br><b>STEP LADDER</b>                     |   |   |   |

\* Refer to REPLACEMENT PARTS (PAGE 16-25) to determine the correct part number when ordering replacements.

# ASSEMBLY INSTRUCTIONS

1. Begin assembly by determining an appropriate location for your sauna – see ASSEMBLY TIPS & WARNINGS for details. Attach the BACK PANEL to the FLOOR by lining up the BACK PANEL with the groove in the back of the FLOOR.



2. Attach the LEFT PANEL to the FLOOR. Buckle the LEFT PANEL to the BACK PANEL.




3. Attach the RIGHT PANEL to the FLOOR. Buckle the RIGHT PANEL to the BACK PANEL.



## ASSEMBLY INSTRUCTIONS (CONT.)

4. **Carbon Heater Models Only:** Attach the FLOOR HEATER to the FLOOR with 1-1/2" SCREWS. Connect the heater plug.

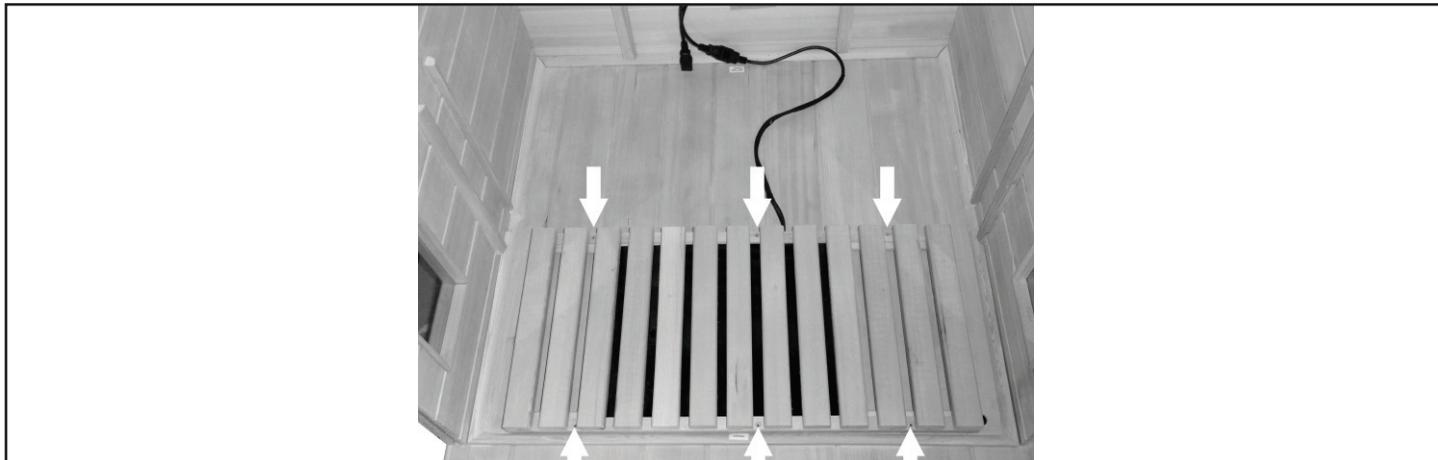

5. Slide the BENCH HEATER PANEL into place between the LEFT and RIGHT PANELS. Connect the heater plug. *Note: For Carbon Heater Models, make sure the FLOOR HEATER cable is placed through the groove in the bottom of the BENCH HEATER PANEL.*



6. Attach BENCH SEAT with 2" SCREWS.



## ASSEMBLY INSTRUCTIONS (CONT.)

7. **Ceramic Heater Models Only:** Attach BACK PANEL HEATER COVER to BACK PANEL with 2" SCREWS and to BENCH SEAT with 3/4" SCREWS.



8. Attach the FRONT PANEL to the FLOOR. Buckle the FRONT PANEL to the LEFT and RIGHT PANELS.




9. Lift the ROOF above the sauna, feeding the control panel and heater cables through the corresponding holes. Feed the cables for the AM/FM CD PLAYER through the hole in the bottom of the ROOF. *Note: For One-Person Models, the ROOF fits inside the four PANELS.* Secure the ROOF to the sauna with 1-1/8" SCREWS. Connect the control panel and heater plugs.



## ASSEMBLY INSTRUCTIONS (CONT.)


10. Feed the main power cable through hole in ROOF COVER. Secure the ROOF COVER with 3/4" SCREWS.

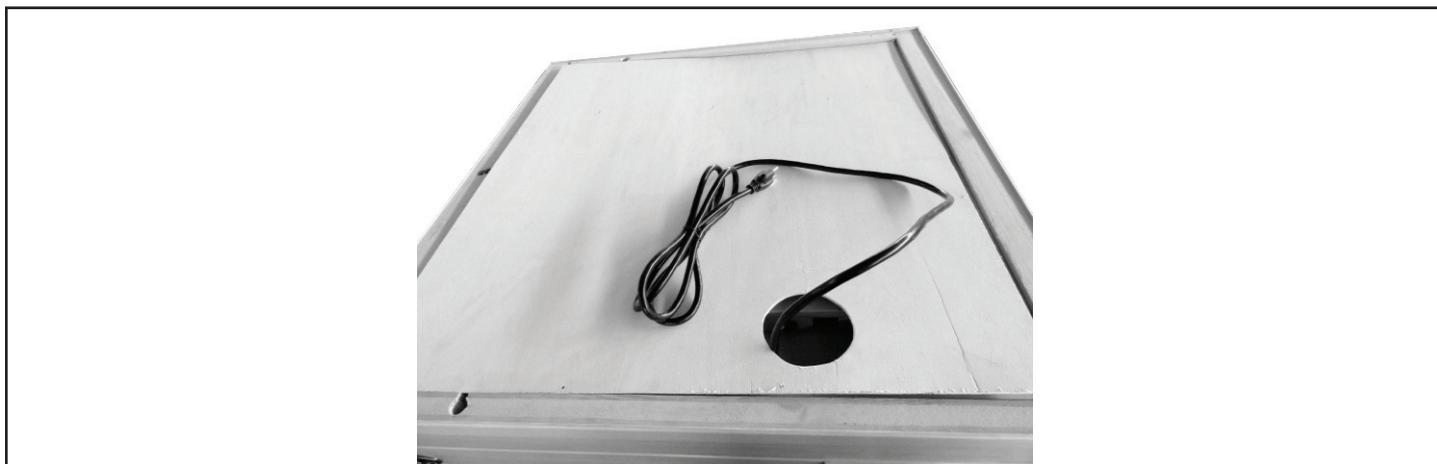

11. Attach the DOOR HANDLE to the GLASS DOOR.



12. Gently pull the cables for the AM/FM CD PLAYER through the opening in the front of the STEREO SHELF. Attach the STEREO SHELF with 3/4" SCREWS.

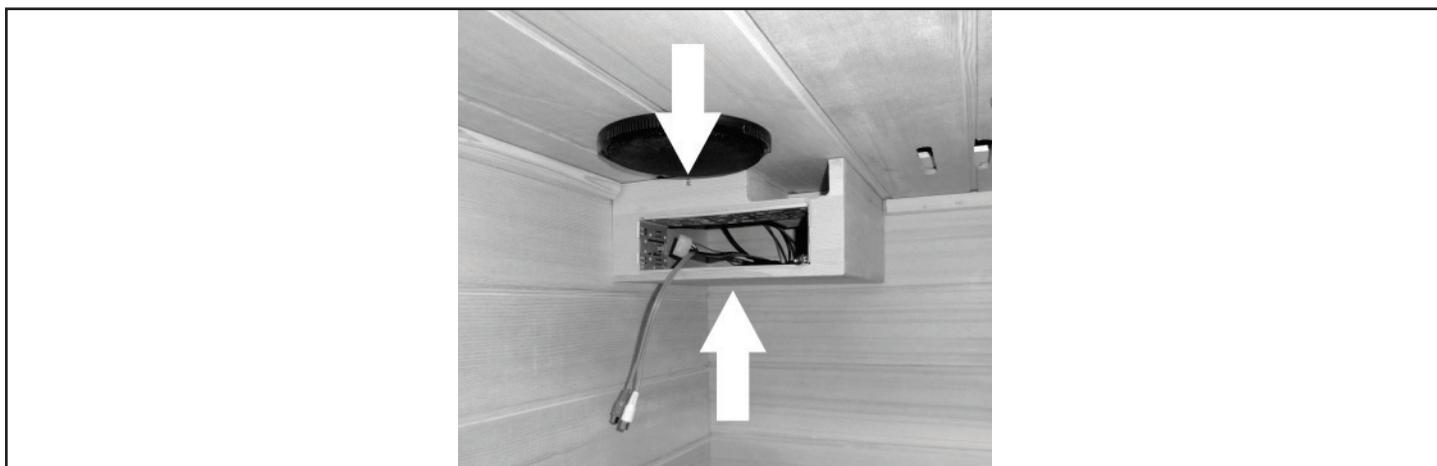

## ASSEMBLY INSTRUCTIONS (CONT.)

13. Plug the controller and antenna into the back of the AM/FM CD PLAYER. *Note: The red and white cables are used for an optional video player and can be tucked out of the way.* Slide and lock the AM/FM CD PLAYER into the STEREO SHELF. *Note: Use "keys" with to remove the CD player for maintenance.*




14. Attach the MAGAZINE RACK with 1-1/2" SCREWS. *Note: A sticker indicates the optimal position for this accessory, but attaching it is optional. Consider the position carefully before driving any screws into the sauna interior.*

15. Attach the CUP HOLDER(S) with 3/4" SCREWS. *Note: A sticker indicates the optimal position for this accessory, but attaching it is optional. Consider the position carefully before driving any screws into the sauna interior.*

16. **Two-Person Models Only:** Attach the DOUBLE TOWEL HOOK with 3/4" SCREWS. *Note: A sticker indicates the optimal position for this accessory, but attaching it is optional. Consider the position carefully before driving any screws into the sauna interior.*

17. **Two-Person Models Only:** Attach the COLOR THERAPY CONTROL PANEL into the designated position with 2" SCREWS.

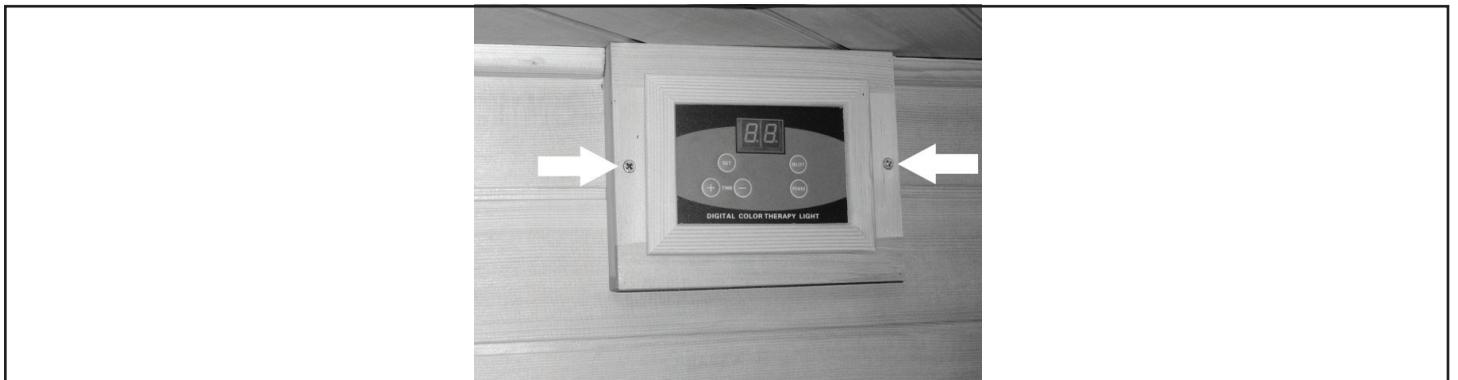

## ASSEMBLY INSTRUCTIONS (CONT.)

18. **Two-Person Models Only:** Remove the back cover of the OXYGEN IONIZER by turning it as indicated. Unwrap and install the fragrance patch, then reattach the back cover. Attach the OXYGEN IONIZER in the designated position with 3/4" SCREWS. Plug the power cable into the OXYGEN IONIZER.



19. Plug the main power cable into a dedicated outlet. *Note: No other appliances should share the same outlet with this sauna.*

## CONGRATULATIONS!

The assembly of your sauna is now complete.

Please review the Operation Instructions and Health & Safety warnings before using your sauna.

To ensure years of trouble-free use, follow the Cleaning & Maintenance guidelines carefully.

# OPERATION INSTRUCTIONS

## SAUNA CONTROL PANEL

*Note: The sauna controls are the same for both the interior and exterior Control Panels.*

1. Press POWER to turn ON the sauna.
2. Set the desired TEMPERATURE with the (+) and (-) buttons.
3. Press and hold both (+) and (-) to switch between °F (Fahrenheit) and °C (Celsius).
4. Set the desired TIME with the (+) and (-) buttons.
5. Press INSIDE or OUTSIDE to turn on or off the corresponding light.
6. When the TIME reaches 00, the heaters will turn OFF automatically.
7. After your sauna session, press POWER to turn OFF the sauna.

## COLOR THERAPY CONTROL PANEL (Two-Person Models Only)

1. Press POWER to turn ON the Color Therapy Light. The Color Therapy Light will cycle through all the available colors.
2. Press SELECT to locate your preferred color or pattern, then press SET.
3. Set the desired TIME with the (+) and (-) buttons, then press SET.
4. Press POWER to turn OFF the Color Therapy Light.

## OXYGEN IONIZER (Two-Person Models Only)

1. Press ION to release negatively charged ions to purify the air.
2. Press O3 to disinfect the air with ozone.

## ENJOYING YOUR SAUNA

1. Prior to initial use, wipe down all interior surfaces of the sauna with a damp cloth.
2. Turn on the sauna and set temperature to 104° F for one hour to burn off any factory dust.
3. Always drink plenty of water before, during and after your sauna session to stay properly hydrated.
4. A normal sauna session should last 30 minutes or less.
5. Allow approximately 10 to 15 minutes for the sauna to warm up before entering.
6. Perspiration will begin within 10 to 15 minutes after entering the sauna.
7. Limit the use of lotions or oils on your body while using your sauna. These products can block your pores and limit perspiration, decreasing the effectiveness of your sauna session.
8. For spot treatment of a particular area, position that body part closer to the heater, allowing for deeper heating in that area.
9. During your sauna session, place towels on the bench seats and on the floor to absorb perspiration and maintain the cleanliness of your sauna.
10. Towel off excess perspiration during your sauna session to help your body perspire more freely.
11. Open the ceiling vent or the front door to allow fresh air into your sauna.
12. Allow your body to cool down following your sauna session, then rinse the perspiration off your body in a warm shower.

## HEALTH & SAFETY WARNINGS

1. Review all instructions and warnings before operating your sauna. A sauna is not a toy. Serious injury may result from negligence, intentional misuse and failure to follow safety instructions.
2. **Hyperthermia Danger:** Hyperthermia occurs when the body absorbs more heat than it can dissipate. When the elevated body temperatures are sufficiently high, hyperthermia is a medical emergency and requires immediate treatment to prevent disability or death. It is very important not to allow your body's core temperature to rise above 103° F. Symptoms of hyperthermia include dizziness, lethargy, drowsiness and fainting. The effects of hyperthermia may include failure to perceive heat, failure to recognize the need to exit the sauna, unawareness of the impending health hazard, physical inability to exit the sauna and unconsciousness.
3. If you are feeling uncomfortable, faint or dizzy, exit the sauna immediately.
4. Do not exceed recommended time and temperature guidelines.
5. Do not touch or interfere with the temperature sensor on the control panel.
6. Do not touch or spray water on the heater elements.
7. Do not use the sauna while under the influence of drugs or alcohol.
8. Do not sleep inside the sauna.
9. Do not use the sauna immediately following strenuous exercise. Allow your body to cool down for 30 minutes before entering the sauna.
10. Pets should never be placed in the sauna.
11. Pregnant women, children under the age of 6, the elderly and infirm should not use the sauna.
12. Children over the age of 6 should always be supervised by an adult.
13. People with health problems including open wounds, fever, sunburn or dehydration should not use the sauna.
14. People suffering from obesity or with a history of heart disease, low or high blood pressure, circulatory system problems or diabetes should consult a physician before using the sauna.
15. Consult a physician before using the sauna if you take any prescription medications.
16. Keep towels and combustible materials away from the heater elements.
17. Remove all towels and materials after your sauna session.
18. Never leave your sauna unattended while in use.
19. Always unplug the sauna and allow it to cool down before performing any cleaning or maintenance.
20. Always turn off and unplug the sauna when not in use.

## CLEANING & MAINTENANCE

1. Always unplug the sauna and allow it to cool down before performing any cleaning or maintenance.
2. Use furniture polish or furniture oil when cleaning the sauna exterior.
3. The sauna interior surfaces should only be wiped down with a damp cloth. Do NOT use chemicals, abrasive cleaners or solvents on the unfinished interior wood.
4. As with all natural wood products, variations in the color and the grain as well as irregularities such as knots and fine cracks may be present. These characteristics are a part of the natural beauty of the wood and should not be considered defective.


## TROUBLESHOOTING GUIDE

### WARNING!

- Always unplug the sauna and allow it to cool down before performing any maintenance.
- Repairs to the electrical components of the sauna should only be performed by a qualified service technician.
- Unauthorized repairs or alterations will void the manufacturer's warranty.

### Problem **THERE IS NO POWER TO THE SAUNA**

- Solution**
1. Check that the Main Power Cable is plugged into the wall outlet.
  2. Check that the circuit breaker for the outlet has not tripped. If the breaker has tripped, check that the amperage of the breaker is appropriate for your sauna.
  3. Check all connections to the Power Supply Box.
  4. Check for damage to the Main Power Cable; replace, if necessary.
  5. Replace the Power Supply Box, if necessary.

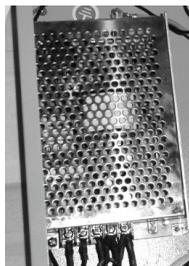

### Problem **ONE HEATER DOES NOT WORK**

- Solution**
1. Check that all the connections are tight.
  2. Replace the Heater Element.

### Problem **NONE OF THE HEATERS WORK**


- Solution**
1. Check that all connections are tight.
  2. Replace the Heater Circuit Board, if necessary.



## TROUBLESHOOTING GUIDE (CONT.)

### Problem THE CONTROL PANEL DOES NOT WORK

- Solution**
1. Check that all the connections are tight.
  2. If the numbers are scrambled or the buttons are unresponsive, replace the Control Panel.
  3. If the temperature indicator does not work or reads "--" or "EP", replace the Control Panel with Temperature Sensor.

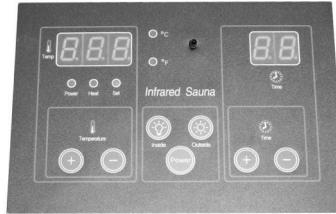

### Problem THE LIGHTS ARE NOT WORKING

- Solution**
1. Check that all the connections are tight.
  2. If one light does not work, replace the bulb. *Note: Do not touch the glass part of the bulb with your fingers during installation.*
  3. If neither the lights nor the radio are working, replace the Power Supply Box.

### Problem THE RADIO AND/OR CD PLAYER IS NOT WORKING

- Solution**
1. Check that all the connections are tight.
  2. Check the fuse; replace if necessary.
  3. Replace the radio.
  4. If neither the radio nor the lights are working, replace the Power Supply Box.

### Problem THE SPEAKERS ARE NOT WORKING

- Solution**
1. Check that the volume is not turned all the way down and that the fader control is set correctly.
  2. If only one speaker is working, check to see that the sound balance on the stereo is not set all the way to one side.
  3. Check that all the connections are tight.
  4. Replace the speaker, if necessary.

### Problem THE COLOR THERAPY LIGHTS ARE NOT WORKING

- Solution**
1. Check that all the connections are tight.
  2. Replace the Color Therapy Light or Color Therapy Control Panel, if necessary.

# REPLACEMENT PARTS


In the event that you need replacement parts, locate your sauna model in the guide below to reference the correct part numbers. It is important to use only the replacement parts specified by the manufacturer. The use of unauthorized substitutes may damage your sauna or cause electrical hazards resulting in injury or fire.

## SA2400 ONE-PERSON HEMLOCK SAUNA WITH CERAMIC HEATERS

| <u>DESCRIPTION</u>                       | <u>PART NUMBER</u> | <u>QTY</u> |
|--|--------------------|------------|
| 2 FRONT PANEL with GLASS DOOR            | SAP2616            | 1          |
| 5 LEFT PANEL                             | SAP2617            | 1          |
| 7 RIGHT PANEL                            | SAP2618            | 1          |
| 3 BACK PANEL                             | SAP2619            | 1          |
| 8 ROOF                                   | SAP2620            | 1          |
| 9 ROOF COVER                             | SAP2601            | 1          |
| 12 FLOOR                                 | SAP2505            | 1          |
| 11 BENCH SEAT                            | SAP2504            | 1          |
| 10 BENCH HEATER PANEL                    | SAP2503            | 1          |
| 28 BACK PANEL HEATER COVER               | SAP2602            | 1          |
| 29 BACKREST                              | SAP3126            | 1          |
| 15 DOOR HANDLE                           | SAP2413            | 1 SET      |
| 26 STEREO SHELF                          | SAP2402            | 1          |
| 14 AM/FM CD PLAYER with MP3 INPUT        | SAP2408            | 1          |
| 18 CUP HOLDER                            | SAP2444            | 1          |
| 6 MAGAZINE RACK                          | SAP2414            | 1          |
| 31 2" (50mm) SCREW                       | SAP2411            | 2          |
| 31 1-1/2" (40mm) SCREW                   | SAP2411            | 4          |
| 31 1-1/8" (30mm) SCREW                   | SAP2411            | 8          |
| 31 3/4" (20mm) SCREW                     | SAP2411            | 18         |
| 30 350W HEATER ELEMENT – BACK PANEL      | SAP2423            | 2          |
| 30 350W HEATER ELEMENT – BENCH HEATER    | SAP2423            | 1          |
| 16 CONTROL PANEL                         | SAP2406            | 1          |
| 16 CONTROL PANEL with TEMPERATURE SENSOR | SAP2603            | 1          |
| 16 CONTROL PANEL FRAME                   | SAP2417            | 1          |
| 17 MAIN POWER CABLE                      | SAP2441            | 1          |
| 25 POWER SUPPLY BOX                      | SAP2407            | 1          |
| 25 HEATER CIRCUIT BOARD                  | SAP2428            | 1          |
| 25 20 AMP OVERCURRENT PROTECTOR          | SAP2529            | 1          |
| 24 INTERIOR LIGHT BULB                   | SAP2403            | 1          |
| 24 LIGHT HOUSING                         | SAP2405            | 1          |
| 24 LIGHT SOCKET                          | SAP2606            | 1          |
| 21 SPEAKER                               | SAP2416            | 2          |
| 1 GLASS DOOR                             | SAP2439            | 1          |
| 19 DOOR HINGE                            | SAP2415            | 2          |
| --- BUCKLE                               | SAP2607            | 12         |

Please see drawing on next page to assist in identifying parts.

# SA2400

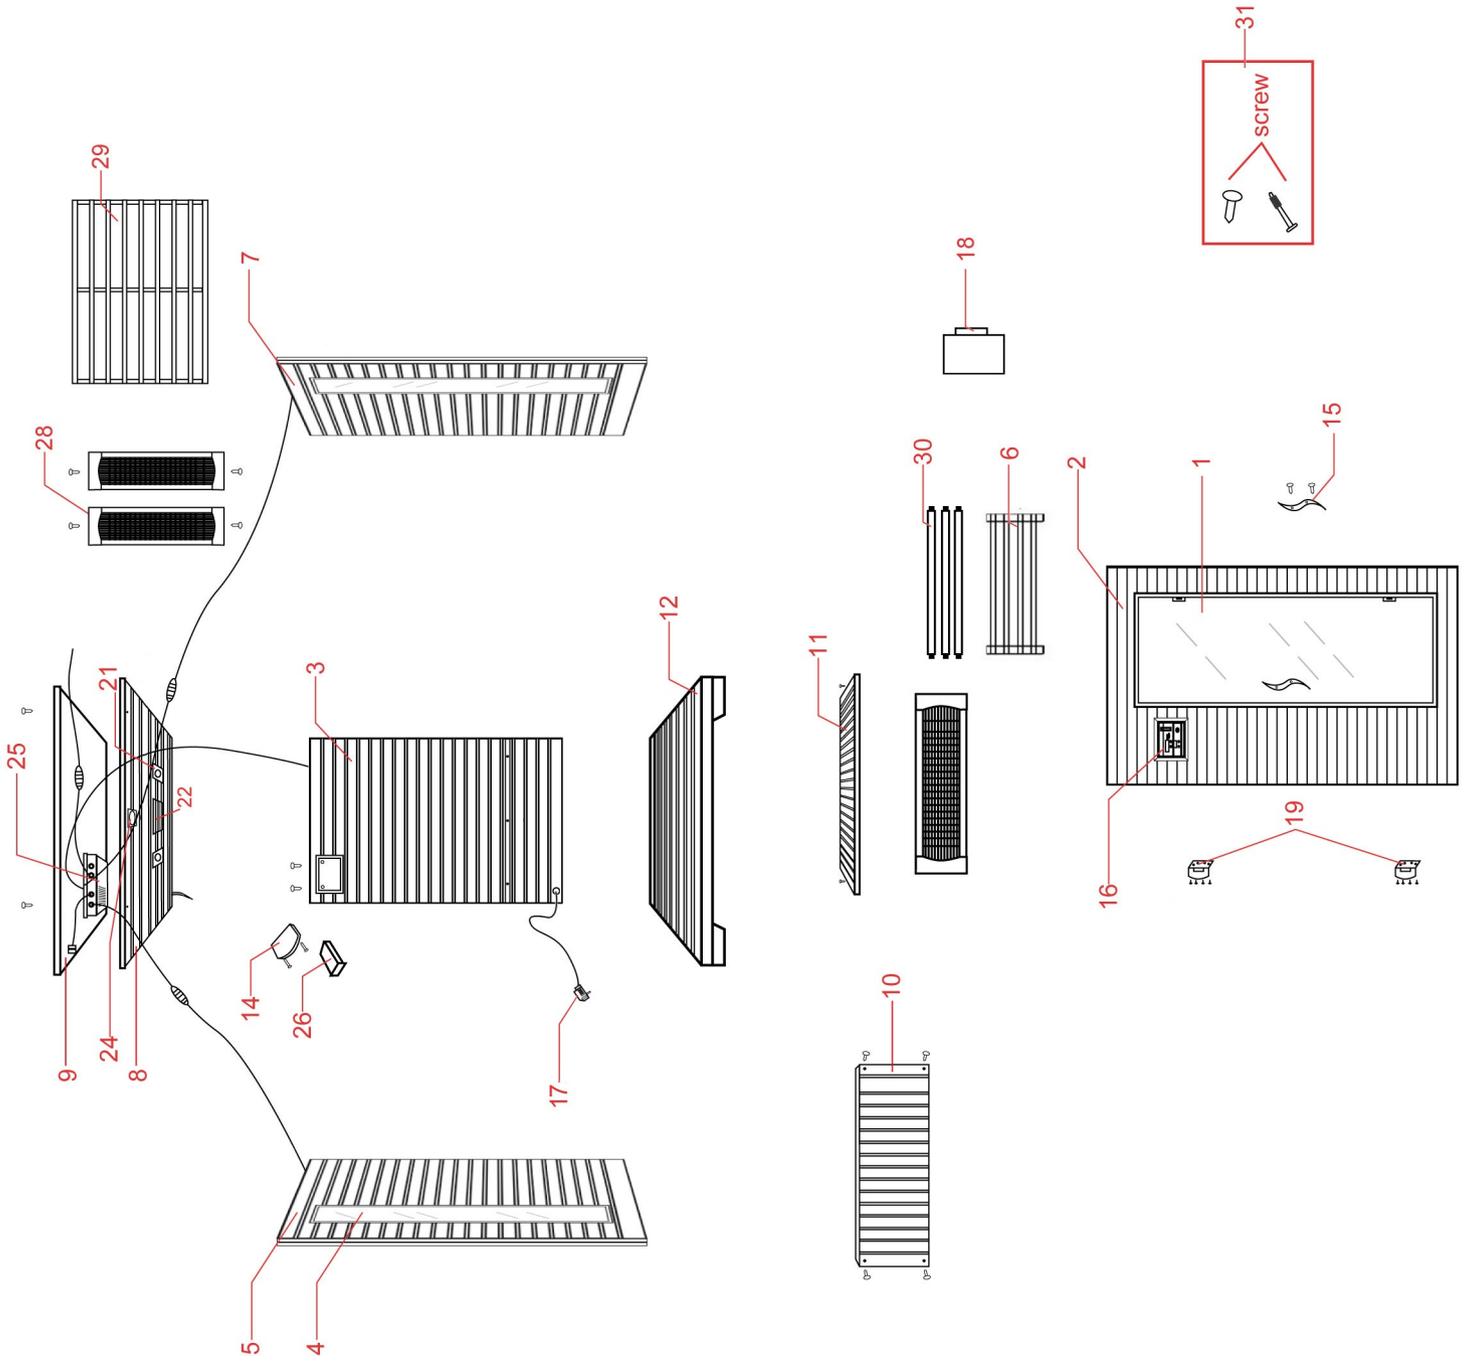


## REPLACEMENT PARTS (CONT.)

### SA2402 ONE-PERSON HEMLOCK SAUNA WITH CARBON HEATERS

| <u>DESCRIPTION</u>                       | <u>PART NUMBER</u> | <u>QTY</u> |
|--|--------------------|------------|
| 2 FRONT PANEL with GLASS DOOR            | SAP2621            | 1          |
| 5 LEFT PANEL                             | SAP2622            | 1          |
| 7 RIGHT PANEL                            | SAP2623            | 1          |
| 3 BACK PANEL                             | SAP2624            | 1          |
| 8 ROOF                                   | SAP2625            | 1          |
| 9 ROOF COVER                             | SAP2608            | 1          |
| 12 FLOOR                                 | SAP2626            | 1          |
| 20 FLOOR HEATER                          | SAP2627            | 1          |
| 11 BENCH SEAT                            | SAP2436            | 1          |
| 10 BENCH HEATER PANEL                    | SAP2628            | 1          |
| 13 BACKREST                              | SAP2412            | 1          |
| 15 DOOR HANDLE                           | SAP2413            | 1 SET      |
| 26 STEREO SHELF                          | SAP2402            | 1          |
| 14 AM/FM CD PLAYER with MP3 INPUT        | SAP2408            | 1          |
| 18 CUP HOLDER                            | SAP2444            | 1          |
| 28 MAGAZINE RACK                         | SAP2414            | 1          |
| 31 2" (50mm) SCREW                       | SAP2411            | 2          |
| 31 1-1/2" (40mm) SCREW                   | SAP2411            | 14         |
| 31 1-1/8" (30mm) SCREW                   | SAP2411            | 2          |
| 31 3/4" (20mm) SCREW                     | SAP2411            | 16         |
| 6 330W HEATER ELEMENT – BACK PANEL       | SAP2418            | 1          |
| 6 330W HEATER ELEMENT – LEFT PANEL       | SAP2418            | 1          |
| 6 330W HEATER ELEMENT – RIGHT PANEL      | SAP2418            | 1          |
| 20 80W HEATER ELEMENT – FLOOR HEATER     | SAP2420            | 1          |
| 32 180W HEATER ELEMENT – BENCH HEATER    | SAP2419            | 1          |
| 16 CONTROL PANEL                         | SAP2406            | 1          |
| 16 CONTROL PANEL with TEMPERATURE SENSOR | SAP2603            | 1          |
| 16 CONTROL PANEL FRAME                   | SAP2417            | 1          |
| 17 MAIN POWER CABLE                      | SAP2441            | 1          |
| 25 POWER SUPPLY BOX                      | SAP2407            | 1          |
| 25 HEATER CIRCUIT BOARD                  | SAP2428            | 1          |
| 25 20 AMP OVERCURRENT PROTECTOR          | SAP2529            | 1          |
| 23 INTERIOR LIGHT BULB                   | SAP2403            | 1          |
| 23 LIGHT HOUSING                         | SAP2405            | 1          |
| 23 LIGHT SOCKET                          | SAP2606            | 1          |
| 21 SPEAKER                               | SAP2416            | 2          |
| 1 GLASS DOOR                             | SAP2439            | 1          |
| 19 DOOR HINGE                            | SAP2415            | 2          |
| --- BUCKLE                               | SAP2607            | 12         |

Please see drawing on next page to assist in identifying parts.

# SA2402

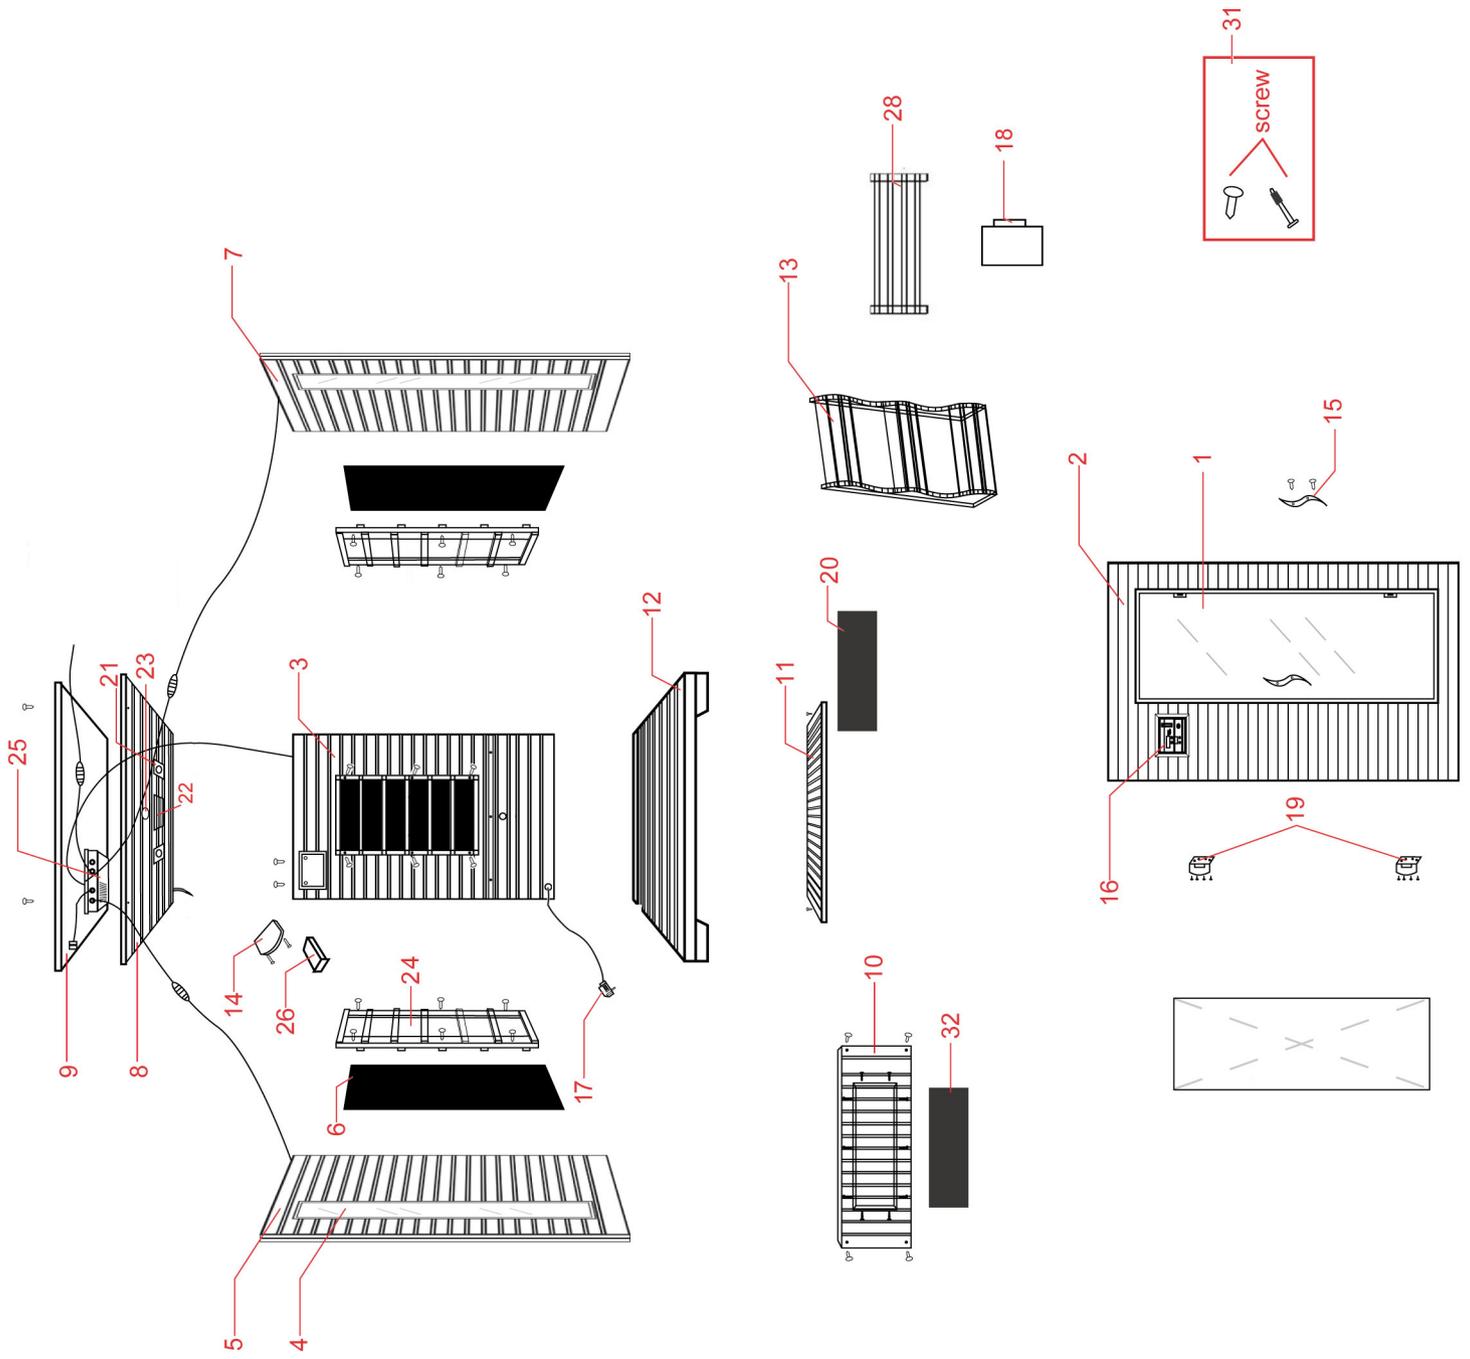


# REPLACEMENT PARTS (CONT.)

## SA2406 TWO-PERSON HEMLOCK SAUNA WITH CERAMIC HEATERS

| <u>DESCRIPTION</u>                       | <u>PART NUMBER</u> | <u>QTY</u> |
|--|--------------------|------------|
| 2 FRONT PANEL with GLASS DOOR            | SAP2629            | 1          |
| 5 LEFT PANEL                             | SAP2630            | 1          |
| 7 RIGHT PANEL                            | SAP2631            | 1          |
| 3 BACK PANEL                             | SAP2632            | 1          |
| 8 ROOF                                   | SAP2633            | 1          |
| 9 ROOF COVER                             | SAP2609            | 1          |
| 12 FLOOR                                 | SAP2634            | 1          |
| 11 BENCH SEAT                            | SAP2667            | 1          |
| 10 BENCH HEATER PANEL                    | SAP2635            | 1          |
| 29 BACK PANEL HEATER COVER               | SAP2610            | 1          |
| 28 BACKREST                              | SAP3127            | 1          |
| 15 DOOR HANDLE                           | SAP2413            | 1 SET      |
| 26 STEREO SHELF                          | SAP2402            | 1          |
| 14 AM/FM CD PLAYER with MP3 INPUT        | SAP2408            | 1          |
| 34 CUP HOLDER                            | SAP2444            | 2          |
| 33 MAGAZINE RACK                         | SAP2414            | 1          |
| 32 DOUBLE TOWEL HOOK                     | SAP2460            | 1          |
| 7 COLOR THERAPY CONTROL PANEL            | SAP2427            | 1          |
| 27 OXYGEN IONIZER                        | SAP2409            | 1          |
| 35 2" (50mm) SCREW                       | SAP2411            | 6          |
| 35 1-1/2" (40mm) SCREW                   | SAP2411            | 4          |
| 35 1-1/8" (30mm) SCREW                   | SAP2411            | 6          |
| 35 3/4" (20mm) SCREW                     | SAP2411            | 24         |
| 6 350W HEATER ELEMENT – BACK PANEL       | SAP2423            | 2          |
| 31 300W HEATER ELEMENT – LEFT PANEL      | SAP2424            | 1          |
| 31 300W HEATER ELEMENT – RIGHT PANEL     | SAP2424            | 1          |
| 31 300W HEATER ELEMENT – BENCH HEATER    | SAP2424            | 1          |
| 16 CONTROL PANEL                         | SAP2406            | 1          |
| 16 CONTROL PANEL with TEMPERATURE SENSOR | SAP2603            | 1          |
| 16 CONTROL PANEL FRAME                   | SAP2417            | 1          |
| 24 MAIN POWER CABLE                      | SAP2441            | 1          |
| 25 POWER SUPPLY BOX                      | SAP2407            | 1          |
| 25 HEATER CIRCUIT BOARD                  | SAP2428            | 1          |
| 25 20 AMP OVERCURRENT PROTECTOR          | SAP2529            | 1          |
| 23 INTERIOR LIGHT BULB                   | SAP2403            | 2          |
| 18 EXTERIOR LIGHT BULB                   | SAP2404            | 2          |
| 23 LIGHT HOUSING                         | SAP2405            | 4          |
| 23 LIGHT SOCKET                          | SAP2606            | 4          |
| 13 COLOR THERAPY LIGHT                   | SAP2410            | 1          |
| 21 SPEAKER                               | SAP2416            | 2          |
| 1 GLASS DOOR                             | SAP2457            | 1          |
| 19 DOOR HINGE                            | SAP2415            | 2          |
| --- BUCKLE                               | SAP2607            | 12         |

Please see drawing on next page to assist in identifying parts.

# SA2406

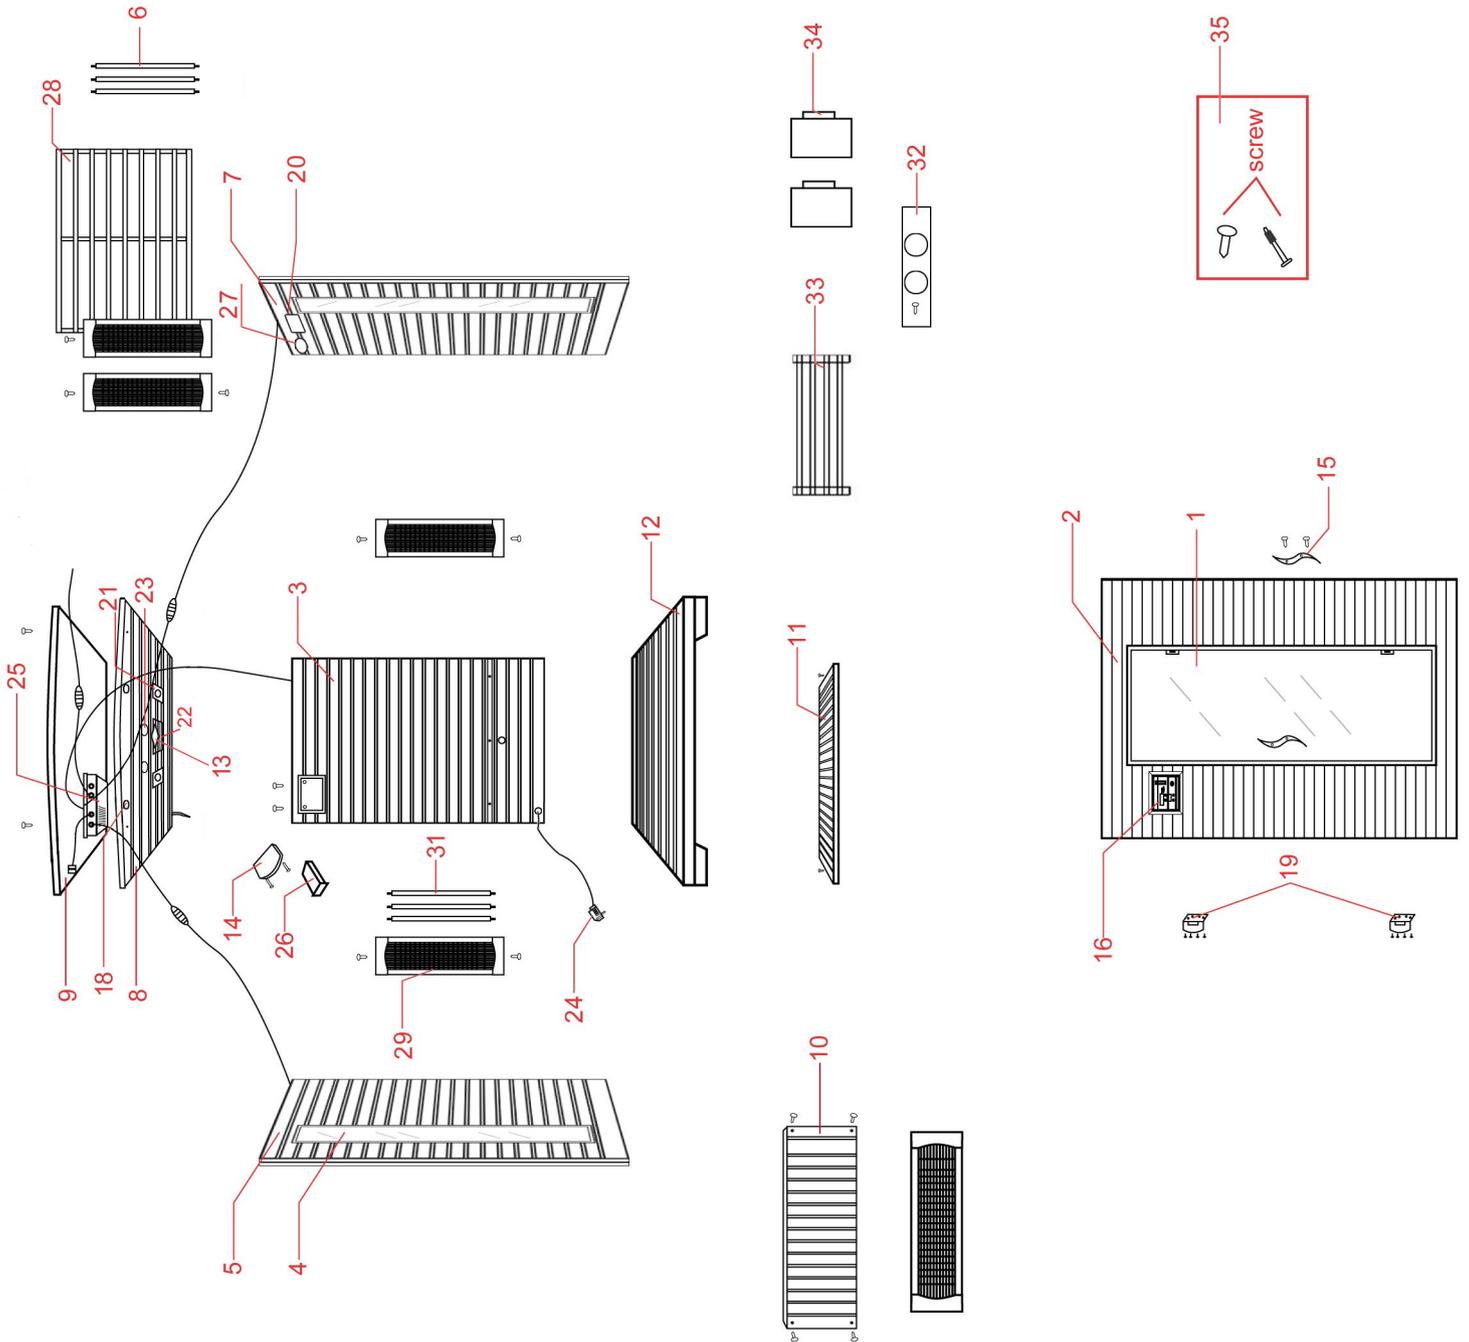


# REPLACEMENT PARTS (CONT.)

## SA2409 TWO-PERSON HEMLOCK SAUNA WITH CARBON HEATERS

| <u>DESCRIPTION</u>                       | <u>PART NUMBER</u> | <u>QTY</u> |
|--|--------------------|------------|
| 2 FRONT PANEL with GLASS DOOR            | SAP2636            | 1          |
| 5 LEFT PANEL                             | SAP2637            | 1          |
| 7 RIGHT PANEL                            | SAP2638            | 1          |
| 3 BACK PANEL                             | SAP2639            | 1          |
| 8 ROOF                                   | SAP2640            | 1          |
| 9 ROOF COVER                             | SAP2611            | 1          |
| 12 FLOOR                                 | SAP2641            | 1          |
| 31 FLOOR HEATER                          | SAP2642            | 1          |
| 11 BENCH SEAT                            | SAP2454            | 1          |
| 10 BENCH HEATER PANEL                    | SAP2643            | 1          |
| 13 BACKREST                              | SAP2412            | 2          |
| 15 DOOR HANDLE                           | SAP2413            | 1 SET      |
| 26 STEREO SHELF                          | SAP2402            | 1          |
| 14 AM/FM CD PLAYER with MP3 INPUT        | SAP2408            | 1          |
| 27 CUP HOLDER                            | SAP2444            | 2          |
| 20 MAGAZINE RACK                         | SAP2414            | 1          |
| 30 DOUBLE TOWEL HOOK                     | SAP2460            | 1          |
| 6 COLOR THERAPY CONTROL PANEL            | SAP2427            | 1          |
| 34 OXYGEN IONIZER                        | SAP2409            | 1          |
| 35 2" (50mm) SCREW                       | SAP2411            | 4          |
| 35 1-1/2" (40mm) SCREW                   | SAP2411            | 10         |
| 35 1-1/8" (30mm) SCREW                   | SAP2411            | 6          |
| 35 3/4" (20mm) SCREW                     | SAP2411            | 24         |
| 24 330W HEATER ELEMENT – BACK PANEL      | SAP2418            | 2          |
| 24 330W HEATER ELEMENT – LEFT PANEL      | SAP2418            | 1          |
| 24 330W HEATER ELEMENT – RIGHT PANEL     | SAP2418            | 1          |
| 33 180W HEATER ELEMENT – FLOOR HEATER    | SAP2419            | 1          |
| 32 225W HEATER ELEMENT – BENCH HEATER    | SAP2421            | 1          |
| 16 CONTROL PANEL                         | SAP2406            | 1          |
| 16 CONTROL PANEL with TEMPERATURE SENSOR | SAP2603            | 1          |
| 16 CONTROL PANEL FRAME                   | SAP2417            | 1          |
| 17 MAIN POWER CABLE                      | SAP2441            | 1          |
| 25 POWER SUPPLY BOX                      | SAP2407            | 1          |
| 25 HEATER CIRCUIT BOARD                  | SAP2428            | 1          |
| 25 20 AMP OVERCURRENT PROTECTOR          | SAP2529            | 1          |
| 23 INTERIOR LIGHT BULB                   | SAP2403            | 2          |
| 18 EXTERIOR LIGHT BULB                   | SAP2404            | 2          |
| 23 LIGHT HOUSING                         | SAP2405            | 4          |
| 23 LIGHT SOCKET                          | SAP2606            | 4          |
| 29 COLOR THERAPY LIGHT                   | SAP2410            | 1          |
| 21 SPEAKER                               | SAP2416            | 2          |
| 1 GLASS DOOR                             | SAP2457            | 1          |
| 19 DOOR HINGE                            | SAP2415            | 2          |
| --- BUCKLE                               | SAP2607            | 12         |

Please see drawing on next page to assist in identifying parts.

# SA2409

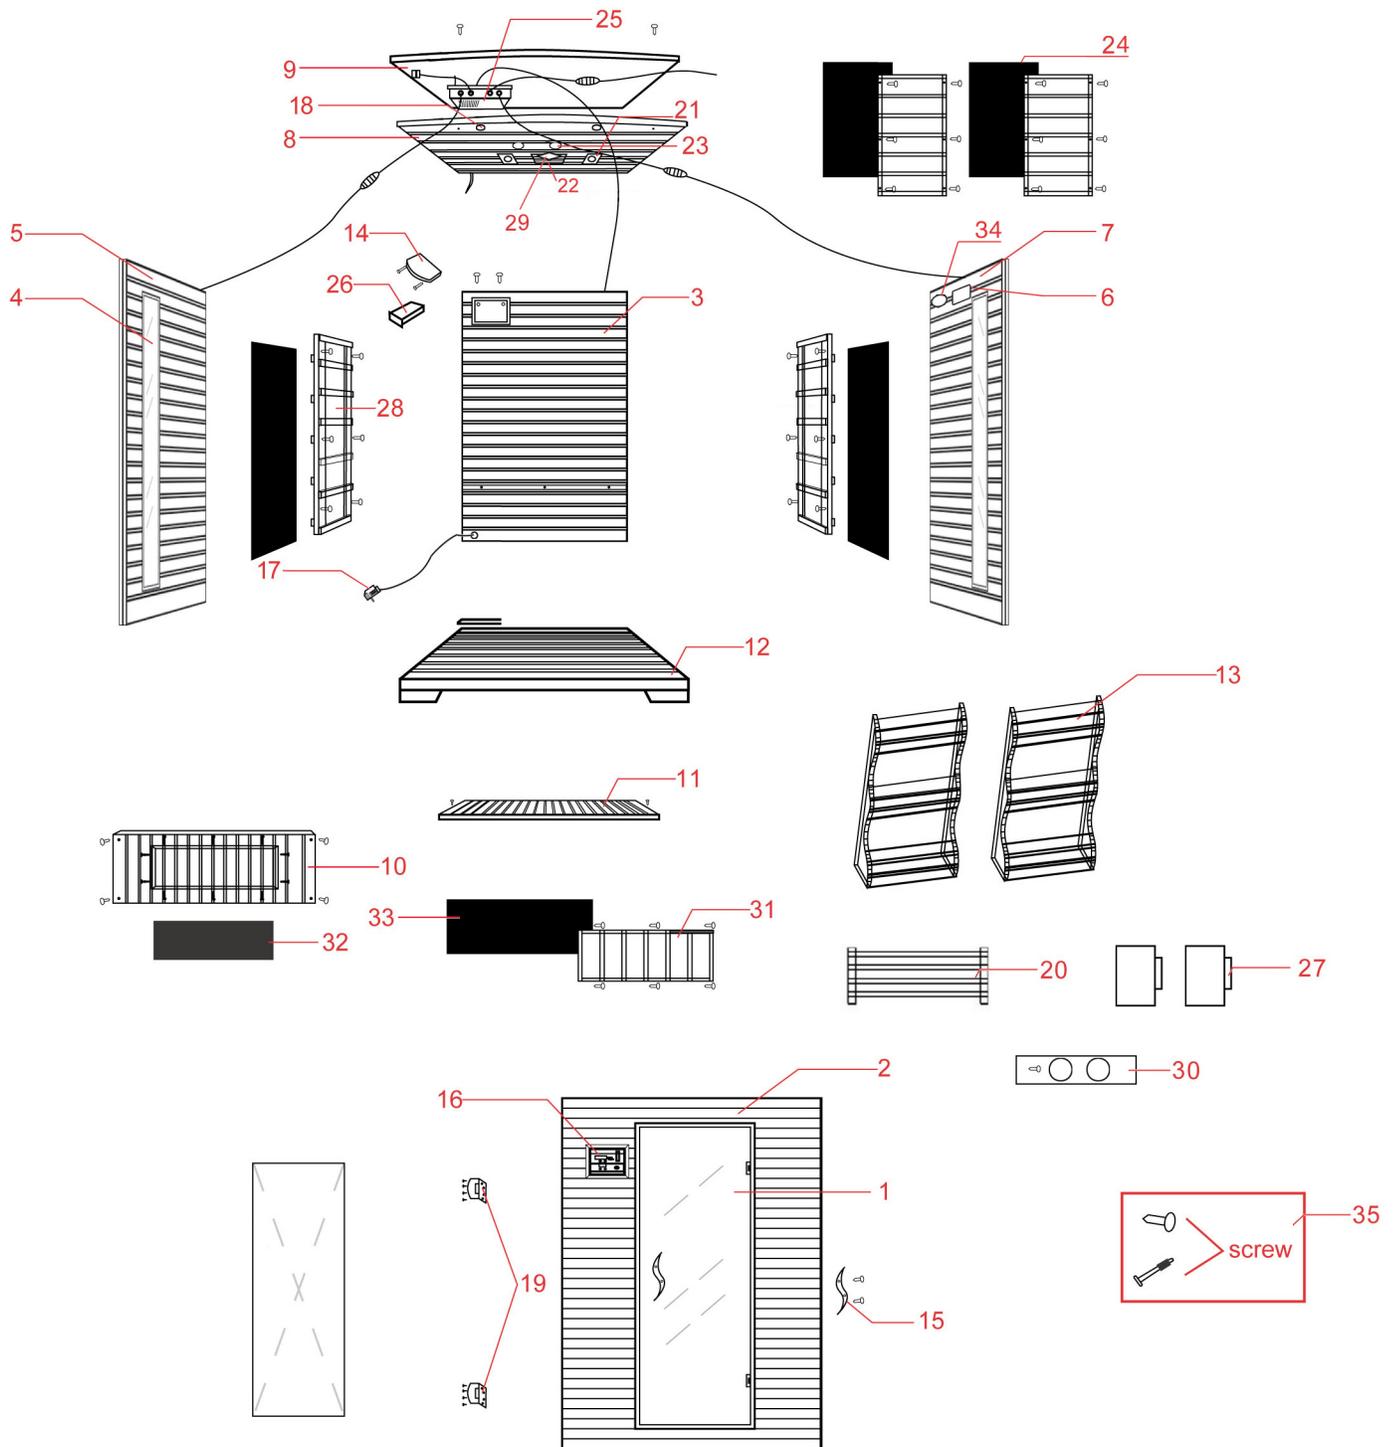


# REPLACEMENT PARTS (CONT.)

## SA1309 TWO-PERSON CEDAR SAUNA WITH CARBON HEATERS

| <u>DESCRIPTION</u>                       | <u>PART NUMBER</u> | <u>QTY</u> |
|--|--------------------|------------|
| 2 FRONT PANEL with GLASS DOOR            | SAP3000            | 1          |
| 5 LEFT PANEL                             | SAP3001            | 1          |
| 7 RIGHT PANEL                            | SAP3002            | 1          |
| 3 BACK PANEL                             | SAP3003            | 1          |
| 8 ROOF                                   | SAP3004            | 1          |
| 9 ROOF COVER                             | SAP3005            | 1          |
| 12 FLOOR                                 | SAP3006            | 1          |
| 31 FLOOR HEATER                          | SAP3007            | 1          |
| 11 BENCH SEAT                            | SAP3008            | 1          |
| 10 BENCH HEATER PANEL                    | SAP3009            | 1          |
| 13 BACKREST                              | SAP3010            | 2          |
| 15 DOOR HANDLE                           | SAP3011            | 1 SET      |
| 26 STEREO SHELF                          | SAP3012            | 1          |
| 14 AM/FM CD PLAYER with MP3 INPUT        | SAP2408            | 1          |
| 27 CUP HOLDER                            | SAP3013            | 2          |
| 20 MAGAZINE RACK                         | SAP3014            | 1          |
| 30 DOUBLE TOWEL HOOK                     | SAP3015            | 1          |
| 6 COLOR THERAPY CONTROL PANEL            | SAP3016            | 1          |
| 34 OXYGEN IONIZER                        | SAP2409            | 1          |
| 35 2" (50mm) SCREW                       | SAP2411            | 4          |
| 35 1-1/2" (40mm) SCREW                   | SAP2411            | 10         |
| 35 1-1/8" (30mm) SCREW                   | SAP2411            | 6          |
| 35 3/4" (20mm) SCREW                     | SAP2411            | 24         |
| 24 330W HEATER ELEMENT – BACK PANEL      | SAP2418            | 2          |
| 24 330W HEATER ELEMENT – LEFT PANEL      | SAP2418            | 1          |
| 24 330W HEATER ELEMENT – RIGHT PANEL     | SAP2418            | 1          |
| 33 180W HEATER ELEMENT – FLOOR HEATER    | SAP2419            | 1          |
| 32 225W HEATER ELEMENT – BENCH HEATER    | SAP2421            | 1          |
| 16 CONTROL PANEL                         | SAP3017            | 1          |
| 16 CONTROL PANEL with TEMPERATURE SENSOR | SAP3018            | 1          |
| 16 CONTROL PANEL FRAME                   | SAP3019            | 1          |
| 17 MAIN POWER CABLE                      | SAP2441            | 1          |
| 25 POWER SUPPLY BOX                      | SAP2407            | 1          |
| 25 HEATER CIRCUIT BOARD                  | SAP2428            | 1          |
| 25 20 AMP OVERCURRENT PROTECTOR          | SAP2529            | 1          |
| 23 INTERIOR LIGHT BULB                   | SAP2403            | 2          |
| 18 EXTERIOR LIGHT BULB                   | SAP2404            | 2          |
| 23 LIGHT HOUSING                         | SAP2405            | 4          |
| 29 COLOR THERAPY LIGHT                   | SAP2410            | 1          |
| 21 SPEAKER                               | SAP2416            | 2          |
| 1 GLASS DOOR                             | SAP2457            | 1          |
| 19 DOOR HINGE                            | SAP2415            | 2          |
| --- BUCKLE                               | SAP2607            | 12         |

Please see drawing on next page to assist in identifying parts.

# SA1309

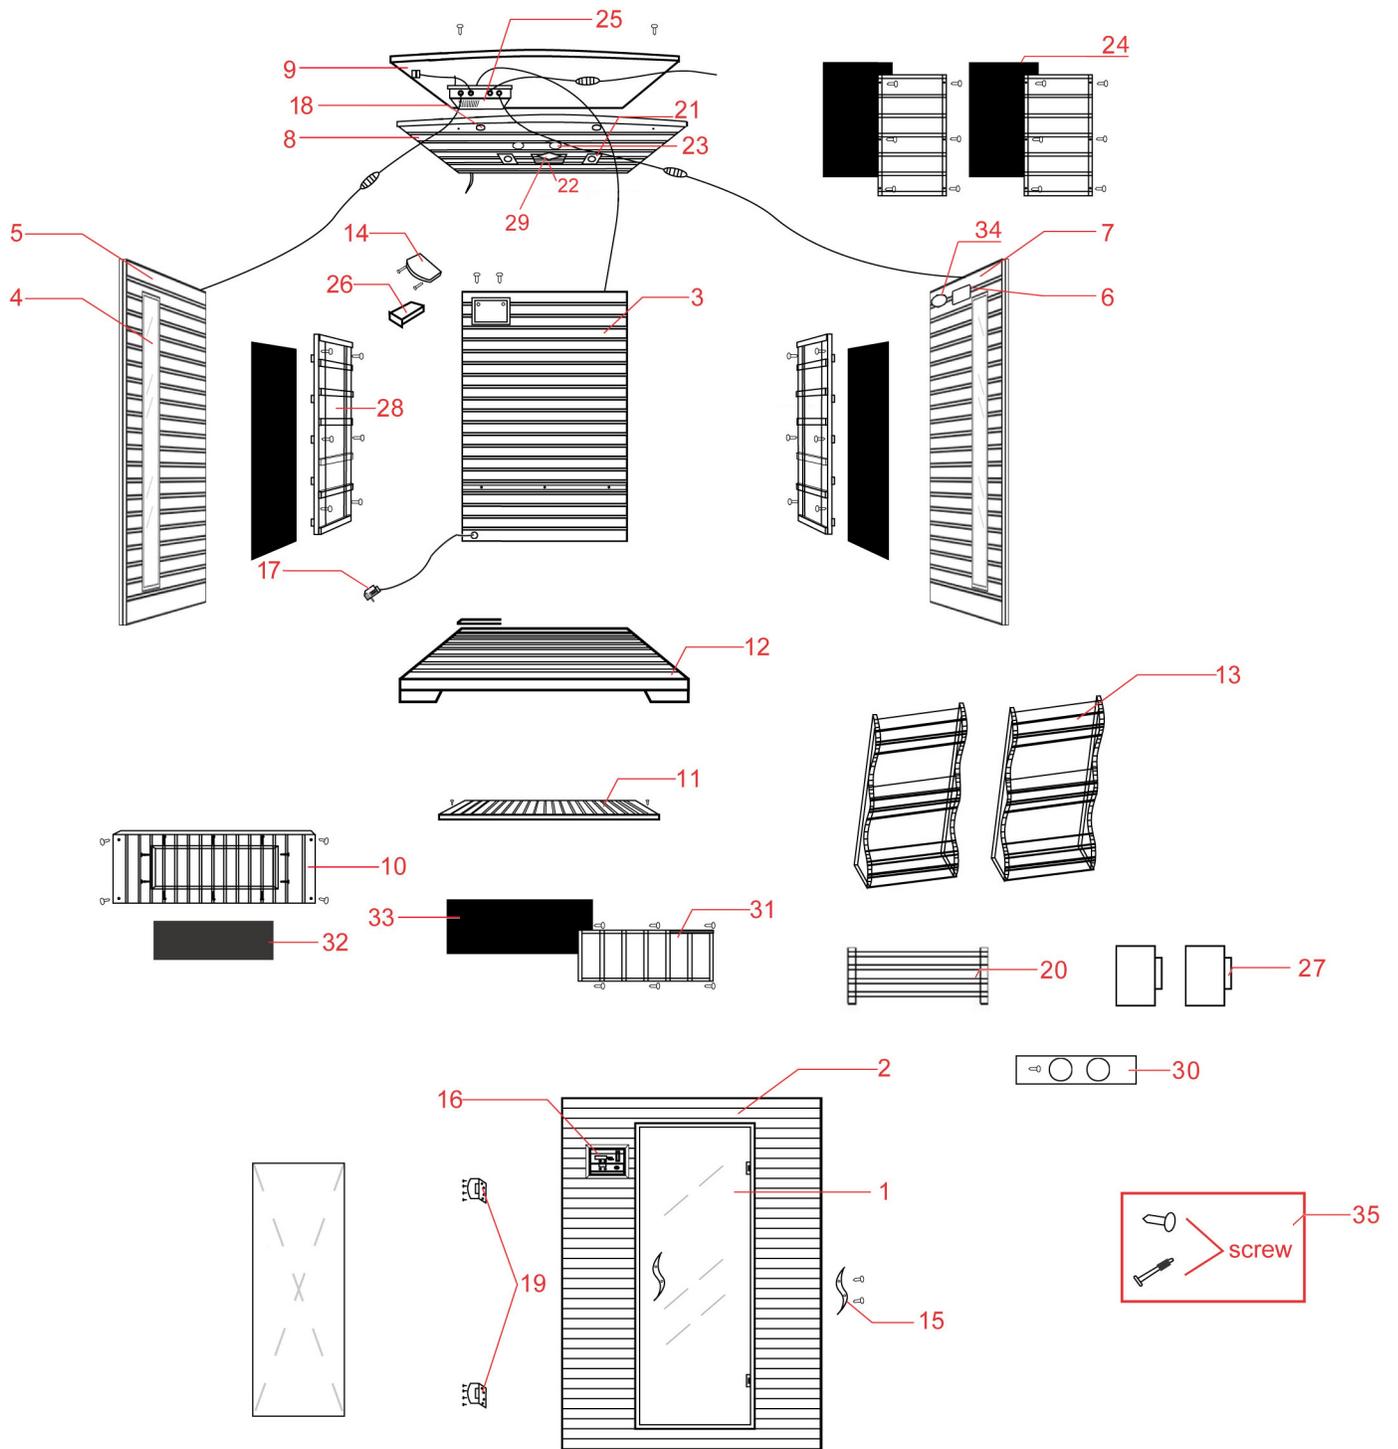

# SAUNA WARRANTY REGISTRATION CARD

1. This sauna has a 5-Year Warranty against defects in materials and workmanship. To receive the warranty, the card must be filled out completely and returned. This 5-Year Warranty covers the sauna. The radio in your sauna is covered by a limited 1-Year Warranty.
2. Please notify Blue Wave Products in advance of any sauna warranty claim prior to shipping the sauna back. Contact our warranty claim department at [warranty@splashnetxpress.com](mailto:warranty@splashnetxpress.com).
3. If the warranty claim department determines that the item must be returned, it must be returned with a receipt showing date of purchase, purchase price, and the dealer from which the sauna was purchased. **No warranty claim will be honored without a receipt.**
4. The freight on the item when returned must be prepaid.
5. Warranty claims will only be resolved with the repair of the current product or shipment of a replacement product. NO REFUNDS will be given.
6. Improper installation, misuse or damages resulting from acts of nature will render this warranty null and void.
7. This warranty is in lieu of all other warranties expressed or implied and no responsibility is assumed for future damage due to misuse. This sauna is intended for INDOOR USE ONLY – outdoor installation of the sauna WILL VOID THE WARRANTY. We are not responsible for damage to the sauna due to improper installation or misuse. Additional actions that will void the warranty are: Use of lacquer or paints, placing sauna on non-approved surface, and outdoor applications.

**Surface cracks are not considered defects in material or workmanship, as they are normal characteristics of all wood.**

*To send in this warranty card: Fill out below, detach and mail to the following address:*

**BLUE WAVE PRODUCTS  
1745 Wallace Ave. Suite B  
St. Charles, IL 60174**

Detach Here

Detach Here

## SAUNA WARRANTY REGISTRATION FORM

Date Purchased: \_\_\_\_/\_\_\_\_/\_\_\_\_

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City/State/Zip: \_\_\_\_\_

Phone: (    ) \_\_\_\_\_ Email: \_\_\_\_\_

Purchased from: \_\_\_\_\_

Item Number: \_\_\_\_\_ Purchase Price: \_\_\_\_\_

Serial Number: \_\_\_\_\_