

Dismantling The Electrode Assembly

When removing the electrode assembly for replacement:

1. Turn all AC power off.
2. Remove the cell plug connecting the cell to the power unit.
3. Remove the outer Blue UV Housing. This housing is a two piece snap together part. You can slide a screwdriver between the Blue UV Housing and the clear housing and by snapping the screwdriver forward, the Blue UV Housing will unsnap.
4. Unscrew the grey PVC nut collar.
5. To loosen the cell head from the clear housing body, place a screwdriver in the notch at the side of the cell head and pry up gently all the way around the cell head.
6. Slide the cell head and electrodes out of the clear housing body.