


## Fitting an LM3 replacement Cell

The old cell being removed may have a collar fitted, to adjust it's size to that of the housing. This collar must be REMOVED before fitting this replacement cell.

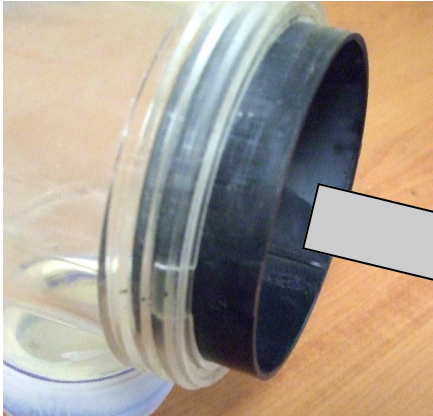


Pull evenly on both sides of the old collar and "wiggle" forward.

The new cell will then fit directly into the housing



## Fitting an LM3 replacement Cell

The old cell being removed may have a collar fitted, to adjust it's size to that of the housing. This collar must be REMOVED before fitting this replacement cell.

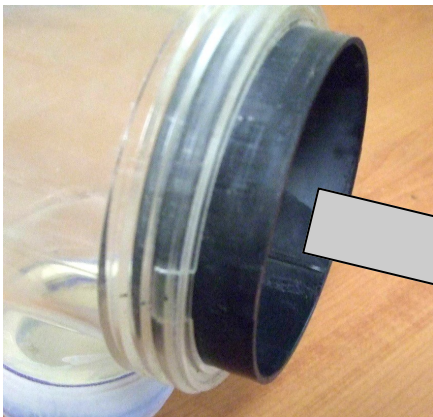

Pull evenly on both sides of the old collar and "wiggle" forward.

The new cell will then fit directly into the housing



## Fitting an LM3 replacement Cell

The old cell being removed may have a collar fitted, to adjust it's size to that of the housing. This collar must be REMOVED before fitting this replacement cell.



Pull evenly on both sides of the old collar and "wiggle" forward.

The new cell will then fit directly into the housing

