

SAVI NOTE UNDERWATER LED LIGHT



MODEL NUMBERS

SAVI-NOTE75, SAVI-NOTE150

savi™

Safety Precautions2

SAVI Note Install Instructions3-4

READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY

I. SAFETY PRECAUTIONS


WARNING

1. To prevent electrocution and/or death make sure power is off at the breaker.
2. Avoid touching/installing the M4 controller box during electrical storms. Death or serious injury may result due to lightning surges through the system.
3. Be sure to check local electrical codes for grounding electrical boxes via the approved method (internal conduit ground, external box ground wire to grounding rod, etc.)
4. Use approved conduit routed by approved methods to conduit fittings on the box.
5. For DMX based units, do not install data cables in the same conduit as power cables to prevent communication problems.
6. Be sure the mounting surface is able to support the load of the controller. Use all four mounting holes to secure the controller.
7. There are no customer serviceable components inside the M4 controller. Only qualified electricians should open the box for installation of the power and LED accessories connections. All connections should enter through an approved conduit method.
8. LED accessories are low voltage and should never be electrically connected to any power source other than the appropriate M4 controller connector (J5 to J8). Wires must be connected properly to avoid permanently damaging the LED accessory.

INSTALLATION INSTRUCTIONS


STEP 1


The light fixture must be installed in or on a wall of the pool with the top of the lens opening not less than 4 inches (10.16cm) below the normal water level of the pool except when the fixture is installed in an area of the swimming pool that is not used for swimming and the lens is adequately guarded to prevent any person from contacting it.

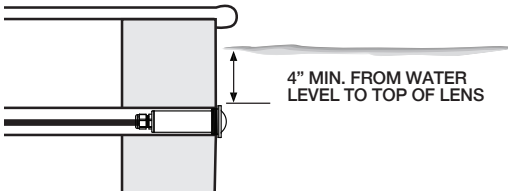

STEP 2

Snake the 4-conductor electric cord through the conduit outlet of the wall fitting, into the conduit and up to the M4 controller. **DO NOT CUT EXCESS CORD.** Leave adequate cord in the conduit (Do NOT wrap cord around fixture) so that the fixture will be able to be raised to the deck if required. Cut off extra cord after, allowing for service and length of run to box. Pull the fixture snug to the wall fitting.

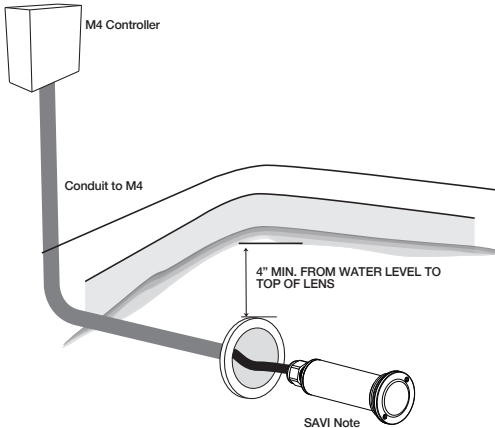

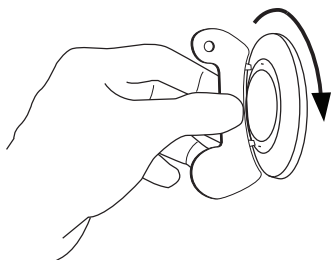**STEP 3**

Using the lens wrench, thread the fixture into the wall fitting until it is snug.

STEP 4

Wire the fixture to the M4 Controller. See M4 instructions on pages 5-11.

STEP 5

Remove the protective cover before startup.



INSTALLATION MANUAL

M4 LED CONTROLLER

For SAVI Notes and X-Stream LED Modules



MODEL NUMBERS

M4-L, M4-H, M4-L-DMX, M4-H-DMX

saviTM

INSTALLATION INSTRUCTIONS

II. MOUNTING

1. Select a mounting location so that the bottom surface of the enclosure will be at least twelve (12") inches above the ground (See FIGURE 1). Be sure to provide enough clearance below the box to route the power, communications, and LED accessory conduits as desired.
2. Place the controller at the location desired and mark the location of the upper two mounting holes.
3. Drill holes as appropriate (wood, masonry block, brick, etc.) for the mounting hardware. Be sure to use a mounting method that can withstand the weight of the controller and the attached conduits.
4. Temporarily secure the box to the mounting surface using the method selected.
5. Mark the position of the lower two holes, remove the box, drill the lower two holes, and prepare the lower mounting locations.
6. Secure the four mounting screws or bolts to complete the mounting of the M4 controller.

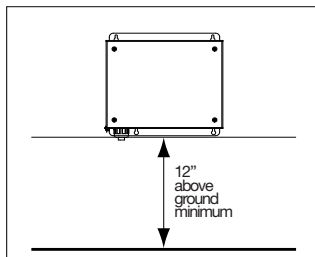


FIGURE 1

WARNING



DUE TO THE DESIRED WATER RESISTANT SEAL OF THE ENCLOSURE, DO NOT REMOVE ANY KNOCKOUTS UNLESS THAT HOLE WILL HAVE A CONDUIT INSTALLED. IF A KNOCKOUT IS ACCIDENTALLY REMOVED, STEPS MUST BE TAKEN TO RE-SEAL THE OPENING OR THE M4 CONTROLLER WILL BE DAMAGED.

III. CONDUIT AND GROUND CONNECTIONS

1. After selecting the desired conduit size ($\frac{1}{2}$ " or $\frac{3}{4}$ "), carefully remove the appropriate "knock outs" in the bottom of the enclosure while being careful not to touch the PCB (Printed Circuit Board).
2. Install the power, communication, and LED accessory conduit fittings as desired to the enclosure (see FIGURE 2).
3. Pull cables through to the ends of the conduit. Leave extra cable length to allow preparation and installation of the wires.

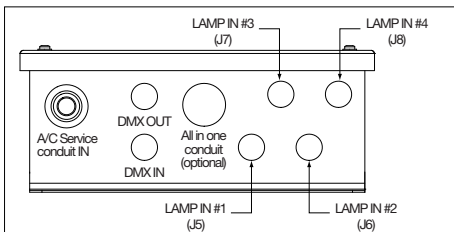


FIGURE 2

Note: The left most conduit fitting hole must be used for installation of power to the controller. The LED accessory and communications conduit connections should be placed as shown in FIGURE 2.

4. Install the ends of the conduit to the enclosure after routing the excess wire length into the enclosure at the appropriate locations (see FIGURE 2)
5. If required by the local electrical codes or as desired, install a ground wire directly to the enclosure using the external ground connection provided (not shown).

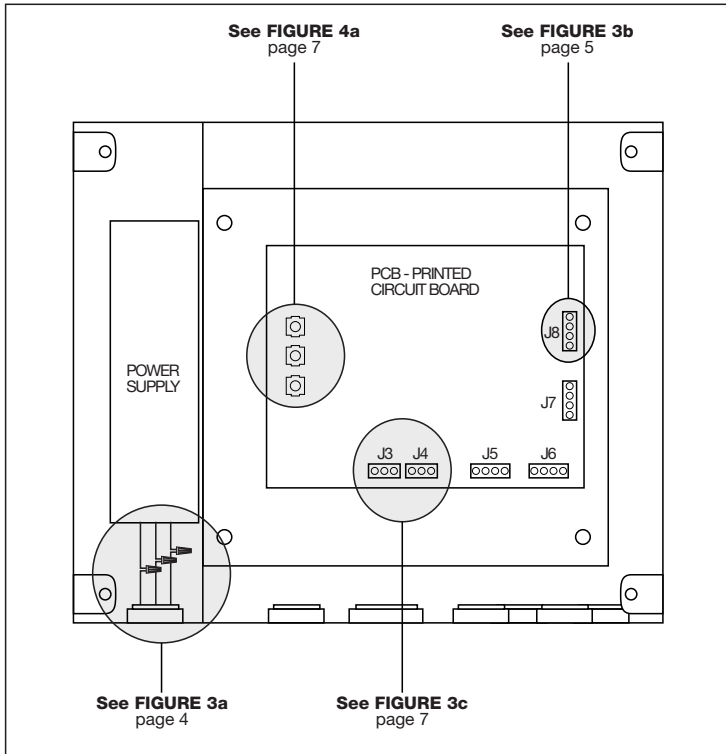


FIGURE 3

IV. INTERNAL WIRING

A/C Connections

1. Locate the power pig-tail provided with the M4 controller. It will be located under the power supply and will consist of one black (120 VAC), one white (neutral), and one green (safety ground) wire.
2. Locate the incoming power wires from the conduit.
3. Trim excess lengths as desired and strip back approximately 3/8" of the insulation from all wires.
4. Twist the black wire of the M4 controller with the incoming "120 VAC" wire. Install a wire nut or crimp using an approved insulated method (see FIGURE 3a).

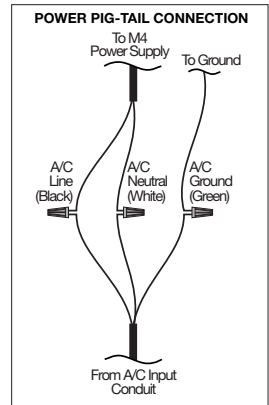


FIGURE 3a

5. Twist the white wire of the M4 controller with the incoming “neutral” (not the ground) wire. Secure as in “step (4)” (see FIGURE 3a).
6. Repeat for the green ground wire and the incoming ground wire (see FIGURE 3a).
7. Carefully tuck the wires into the area below the power supply while being careful that the wires do not lay against the internal components of the power supply.
8. If possible, verify a grounding path exists between the incoming service ground wire and the case of the M4 controller. If this is not possible, double check the ground connection between the crimp and/or wire nut connection and the case of the M4 controller.


WARNING



DUE TO THE DESIRED WATER RESISTANT SEAL OF THE ENCLOSURE, DO NOT REMOVE ANY KNOCKOUTS UNLESS THAT HOLE WILL HAVE A CONDUIT INSTALLED. IF A KNOCKOUT IS ACCIDENTALLY REMOVED, STEPS MUST BE TAKEN TO RE-SEAL THE OPENING OR THE M4 CONTROLLER WILL BE DAMAGED.

V. LED ACCESSORY CONNECTIONS (SAVI Note or X-Stream LED Modules)

1. Locate the incoming cable for fixture #1 (see FIGURE 2). This cable will be attached to terminal block J5 on the PCB. Trim excess cable leaving no more than six (6) inches protruding from the conduit.
2. Carefully remove two (2) inches of insulation from the cable (a box cutter set to protrude less than 1/8” is good for this purpose). Cut from the desired removal location towards the cut end of the cable to prevent damaging the internal wires.
3. Separate the insulation along the cut path and fold it back. Using cutters remove the excess cable insulation. Only the four internal wires should be remaining (red, green, blue, and a fourth conductor - usually black).
4. Using the wire stripper, remove 1/8 to 3/16” of insulation from each of the four wires.
5. The wires will be installed as shown in FIGURE 3b below.

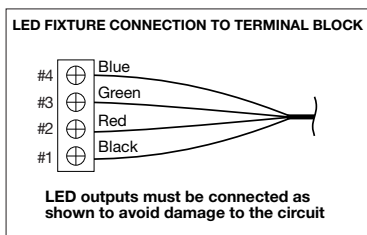

- #1 Position - Power Wire (usually Black)
- #2 Position - Red wire
- #3 Position - Green wire
- #4 Position - Blue wire

FIGURE 3b

6. Insert each wire into the appropriate terminal block location. Using a small flat blade screwdriver, tighten each screw of the terminal block until you feel it compress the wire and become difficult to turn (approximately 3.5 in-lbs). **DO NOT OVERTIGHTEN.** Carefully pull on the wire to verify it is secure.

7. Repeat for the remaining three wires of the cable (see **FIGURE 3b**). Tuck the excess cable out of the way for the remaining steps.
8. Repeat steps 2-7 for fixture #2 using the appropriate conduit input for location #2 (usually the back most to the right side) and J6 of the PCB (see **FIGURE 3b**).

Note: Before cutting the cables for fixtures #3 & #4 (steps 9-10), verify the desired internal routing location to J7 & J8. Be sure to leave enough cable to reach the appropriate terminal block.

9. Repeat steps 2-7 for fixture #4 (it helps to install #4 before #3). Usually this will be the front most conduit input to the right. Connect fixture #4 to J8 of the PCB (see **FIGURE 3b**).
10. Repeat steps 2-7 for fixture #3. Connect fixture #3 to J7 (bottom right) of the PCB (see **FIGURE 3b**).

Note: Using an adhesive backed, tie wrap mount helps locating the cables for fixture #3 after tucking the cable for #4 along the right wall.

VI. DMX COMMUNICATION BUS CONNECTIONS (ON DMX UNITS)

Some M4 controllers use an optional serial communications bus (DMX bus) to communicate with a master controller. Some installations only require an incoming cable, while other installations will require an input, as well as an output cable (proceeding on to the next receiver/controller). This section details how to attach those connections.

1. Determine if the installation uses an input, or both an input and an output DMX connection. An additional output connection can be added in the future if desired.
2. Locate the incoming DMX communication cable (see **FIGURE 2**). This cable will be attached to terminal block J3 on the PCB. Trim excess cable leaving no more than four (4) inches protruding from the conduit.
3. Carefully remove one and one-half (1-1/2) inches of insulation from the cable. The cable is a twisted shielded pair type, so be careful to not damage the shield or the internal wires.
4. Locate the actual shield “cable” within the overall “shield” (see **FIGURE 3d**) and separate it from the individual shield wires. Carefully cut off and remove the shield wires but NOT the small shield cable (see **FIGURE 3d**).


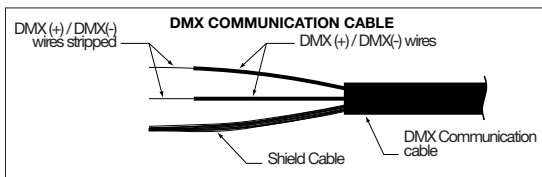


FIGURE 3d

5. Using the wire stripper, remove 1/8 to 3/16" of insulation from each of the remaining two wires.

6. The wires will be installed as shown in the figure below. The order of the wires are:

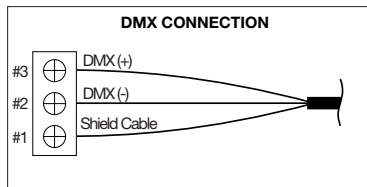

- #1 Position Shield Cable Wire
 #2 Position DMX (-) or inverted input
 #3 Position DMX (+) or non-inverted input

FIGURE 3c

7. Insert each wire into the appropriate terminal block location. Using a small flat blade screwdriver, tighten each screw of the terminal block until you feel it compress the wire and become more difficult to turn. DO NOT OVERTIGHTEN. Carefully pull on the wire to verify it is secure.
8. If appropriate, repeat steps 3-7 for the DMX output cable which should be attached to J4 of the PCB.

VII. SYSTEM TESTING

Once all connections are completed, it is time to test the system.

Make sure all tools and loose items are removed from the controller and that no obvious damage has occurred to the PCB before applying power to the unit. Do not skip the grounding test mentioned earlier. It is imperative that a good system/safety ground be provided to the system for the safety of all. Once satisfied that all appropriate preparations are complete, proceed to the steps below.

1. To check the system it is necessary for someone to monitor the output of the accessory lamps during the power up sequence. Have one observer ready to see how the LED accessory lights look during the initial power on.
2. If the unit is a DMX style unit, it will have rotary switches on the PCB on the side towards the power supply. Using a small screwdriver, set the following address on the switches (See FIGURE 4a).

S3 - Top Switch = 7

S2 - Middle Switch = 0

S1 - Bottom Switch = 1

(a stand-alone unit will not have switches so no setting is required)

3. Activate the circuit breaker or switch to provide power to the unit. After initial power up, DMX units will enter a “power-on” sequence consisting of (white, red, green, and blue) before returning to a white output on all LED accessories. Investigate the connections for any accessory that does not work correctly.

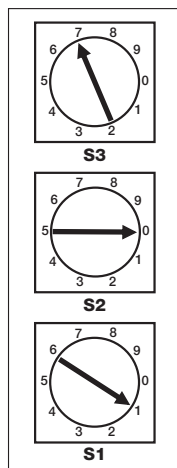


FIGURE 4a

- Stand-alone units will come on to one of several modes, but will always be “ON” when power is provided to the controller. By toggling power, you can cycle through all of the modes in the following order:

Color Modes

- Slow color change (takes about a minute to cycle)
- White
- Blue
- Green
- Aqua (Green and Blue)
- Pink
- Green & Blue fade (back and forth)
- Fast color change (about 15 seconds to cycle)
- “Party” mode (blinks quickly between colors).

Investigate the connections for any accessory that does not work correctly. It is recommended that the colors be cycled until the “white” mode for this test. Please note, that if power remains off for at least nine (9) seconds, the unit will store the last mode and a “safety” white mode will be displayed on power up for 12 to 13 seconds before the stored mode is recalled. Please consult the user manual for more detailed operation instructions.

- Once testing is completed, power off the unit.
- Finally, as desired, the DMX address should be set (for DMX units). The top switch (S3) is the “one-hundreds” unit for the address, the middle switch (S2) is the “tens” unit, and the lower switch (S1) is the “ones” unit. Addresses may be set from 1 to 501. This unit “uses” twelve addresses (so address 501 uses addresses 501 to 512 for example). To set the unit to base address 127 set the S1, S2 & S3 switches as follows (See FIGURE 4b):

S3 -Top Switch = 1

S2 - Middle Switch = 2

S1 - Bottom Switch = 7

Set other address in a similar manner.

- After cycling power to the unit again (with the new address on the switches), the unit will respond to standard DMX commands (from the master controller) at the base address (LED accessory #1 – red), up through the next eleven addresses (last address is LED accessory #4 – blue).
- When satisfied the unit and installation are working properly, proceed to the “Close Out” section of this manual.

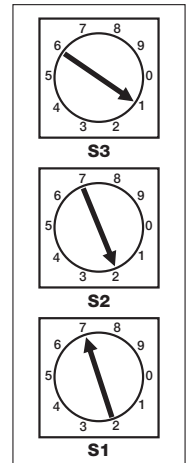


FIGURE 4b

VIII. CLOSE OUT

1. Locate the cover of the M4 controller and the installation hardware provided (screw and flat washer).
2. Check the gasket in the inside of the cover for damage and then turn the cover as appropriate to orient the exterior silk-screened logos and/or lettering.
3. Install the cover using the installation hardware. Torque each of the four screws to 12 in-lbs of torque maximum.

WARNING



OVER TIGHTENING THE SCREWS ON THE COVER WILL DAMAGE THE CASE AND SEALING SYSTEM. THIS MAY ALLOW WATER TO PENETRATE INTO THE M4 CONTROLLER AND CAUSE FAILURE. IF NO TORQUE SCREWDRIVER IS AVAILABLE, CAREFULLY TIGHTEN EACH OF THE FOUR SCREWS UNTIL A MEDIUM LEVEL OF "SNUGNESS" IS ACHIEVED. THE GOAL IS TO COMPRESS THE GASKET WITHOUT DAMAGING THE MOUNTING FLANGES FOR THE COVER SCREWS.

THIS COMPLETES THE INSTALLATION OF THE M4 CONTROLLER. PLEASE PROCEED TO THE OPERATION MANUAL FOR INSTRUCTIONS ON HOW TO USE THE M4 CONTROLLER.



LIMITED WARRANTY

Nexxus Lighting, Inc. warrants its products, excluding lamps, to be free from defects in material and/or workmanship, under normal condition, use and service, for a period of two (2) years from the original invoice date (Five (5) Years for Red, Amber and Orange FlexLED and Border Light LED products and one (1) Year for Non-UL Listed Power Supplies). If proof of purchase is provided, Nexxus Lighting will warranty the product for two (2) years from date of the purchase (Five (5) Years for Red, Amber and Orange FlexLED and Border Light products and one (1) Year for Non-UL Listed Power Supplies).

TERMS AND CONDITIONS:

This warranty only applies when Nexxus Lighting products are properly wired and installed together as a system; and operated within the electrical values shown on the Nexxus Lighting specification sheets; used in lighting equipment designed and approved for the application and environmental conditions (temperature, humidity) within the normal specified operating range of the system. This warranty does not apply to any abnormal use in violation of any applicable standard, code or instructions for use in installations including those contained in the latest National Electrical Code (NEC), the Standards for Safety of Underwriters Laboratory, Inc. (UL), Standards for the American National Standards Institute (ANSI), in Canada, the Canadian Standards Association (CSA), Europe (CE), Australia (C-Tick). This warranty will not apply in the event of conditions demonstrating abnormal use or stress, including under/over voltage conditions, excessive switching cycles, excessive operating hours, alterations, accident, theft, misuse, abuse and damaged caused by negligent installation, improper maintenance or where adequate care has not been taken to prevent damage to the lighting system. Replacement of Nexxus Lighting components with any other manufacturer will void the entire warranty.

WARRANTY SERVICE CLAIMS:

Nexxus Lighting must issue a Return Material Authorization (RMA) number for all requests for warranty review. To expedite service, please contact Nexxus Lighting Customer Representative: 407-857-9900. If you are unsure whether a situation exists that is covered by this warranty, please contact Nexxus Lighting Customer Service for assistance. In the event of a defect in material or workmanship during the warranty period, Nexxus Lighting will repair or replace (at its own discretion) its products under the conditions of the warranty.

RETURN OF DEFECTIVE PRODUCT:

After contacting Nexxus Lighting, Inc. and receiving the RMA#, the purchaser / user shall promptly return the product after receiving instructions regarding if, when and where to ship product. Product must be returned within 30 days of receiving RMA#, Shipping box must be clearly marked with RMA#. Failure to follow this procedure shall void this warranty. Nexxus Lighting will cover expenses for material but will not cover shipping costs. Products returned without an RMA# will be refused and returned to sender at the senders expense.

REPLACEMENT OF PRODUCT, LIMITS OF LIABILITY:

The foregoing shall constitute the exclusive remedy of the purchaser and the sole liability of Nexxus Lighting, Inc. regarding its products and component warranty. **NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS MADE OR IS TO BE IMPLIED.** In no event shall Nexxus Lighting, Inc. be liable for any other costs or damages including labor charges, lost profits or revenues, incidental, special or consequential damages. Total liability shall not exceed the total extended purchase price for the product. Nexxus Lighting, Inc. reserves the right to examine all failed Nexxus Lighting, Inc. products and components to determine the cause of failure and patterns of usage and reserves the right to be the sole judge as to whether any product or component is defective and covered under this warranty.

